


## BMS LINK FOR PYLONTECH Battery 48V

### Step1: Connect BMS LINK

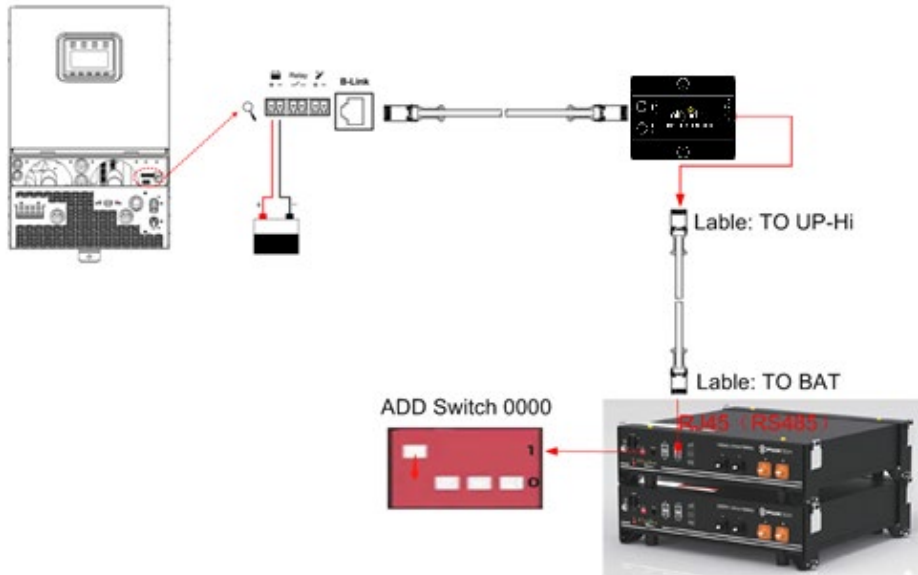

### Step2: Set parameters of IC-24/48

1. Press UP+DOWN on the main interface at the same time



2. Enter the following interface



3. Press DOWN to PROTOCOL



4. Long press the SET/ENTER until the number flashes



5. Press the UP, SELECT 11


6. Press SET/ENTER.

### Step3: Set parameter of Battery



## Step4:

The LCD BMS icon of IC-24/48 lights up,  
the green STATUS indicator of BMS-LINK lights up,  
BMS communication is successfully established.

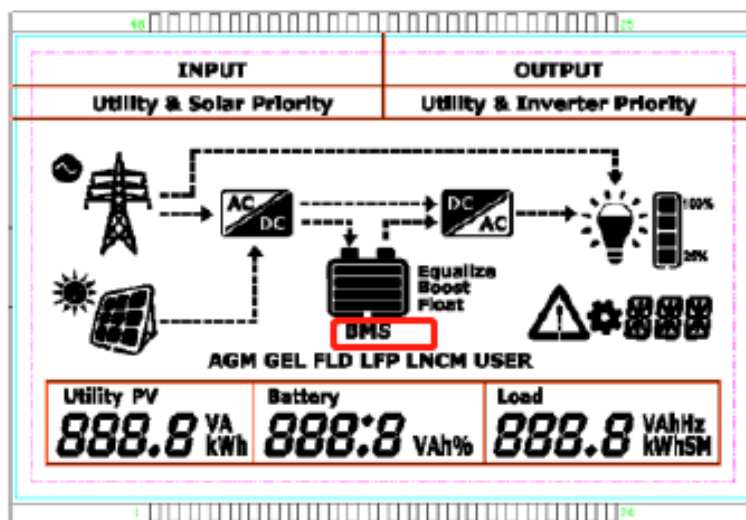

## Status LED:

Green: Normal

Red: Abnormal communication

